
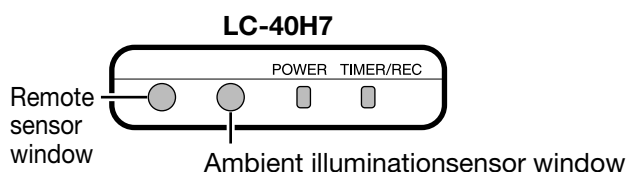
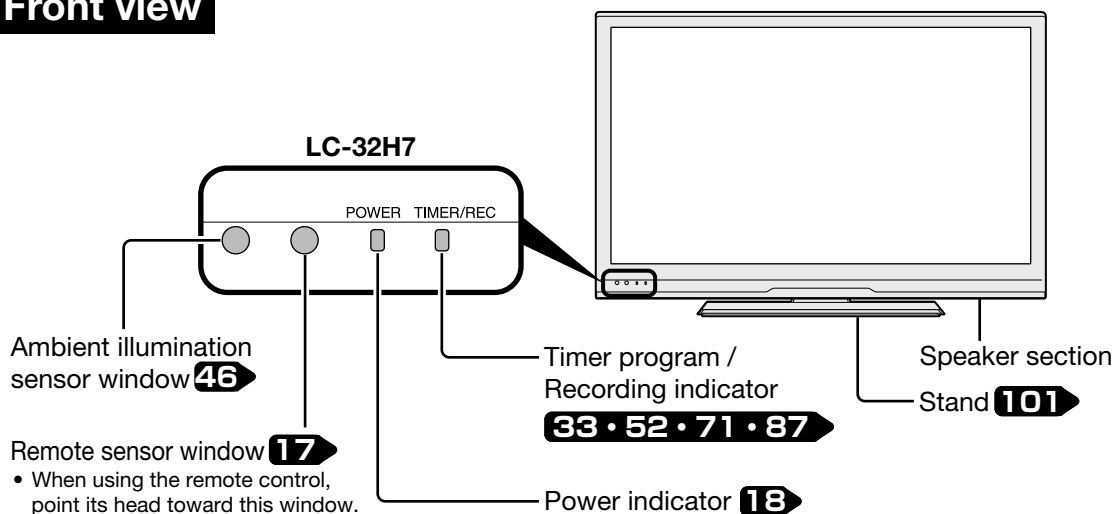


English Guide


Part Names

- The numbers shown in the  symbols are the page numbers where part functions and/or use are explained in Japanese.
- The illustrations below are those of LC-32H7.


Front view




Left side view

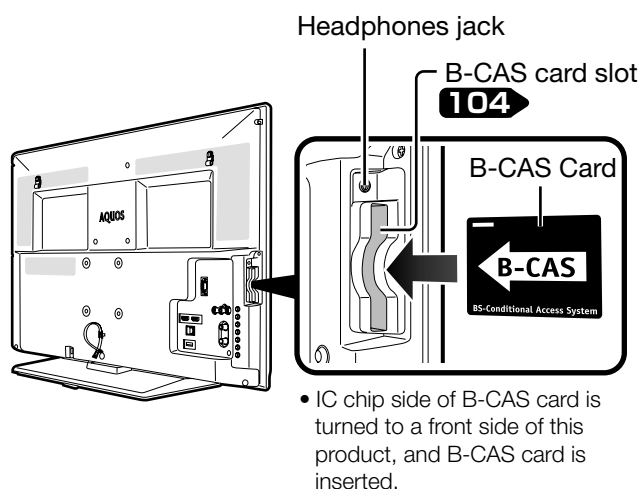


Left side view(LC-40H7)

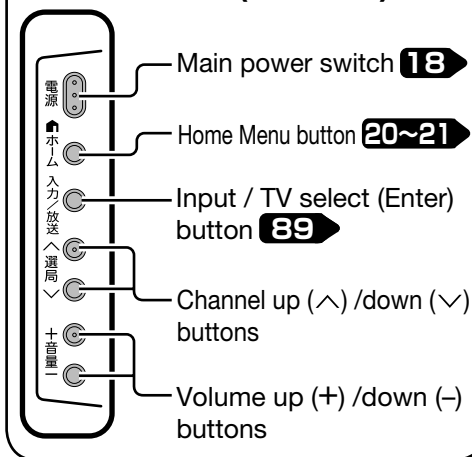

Back view(LC-40H7)

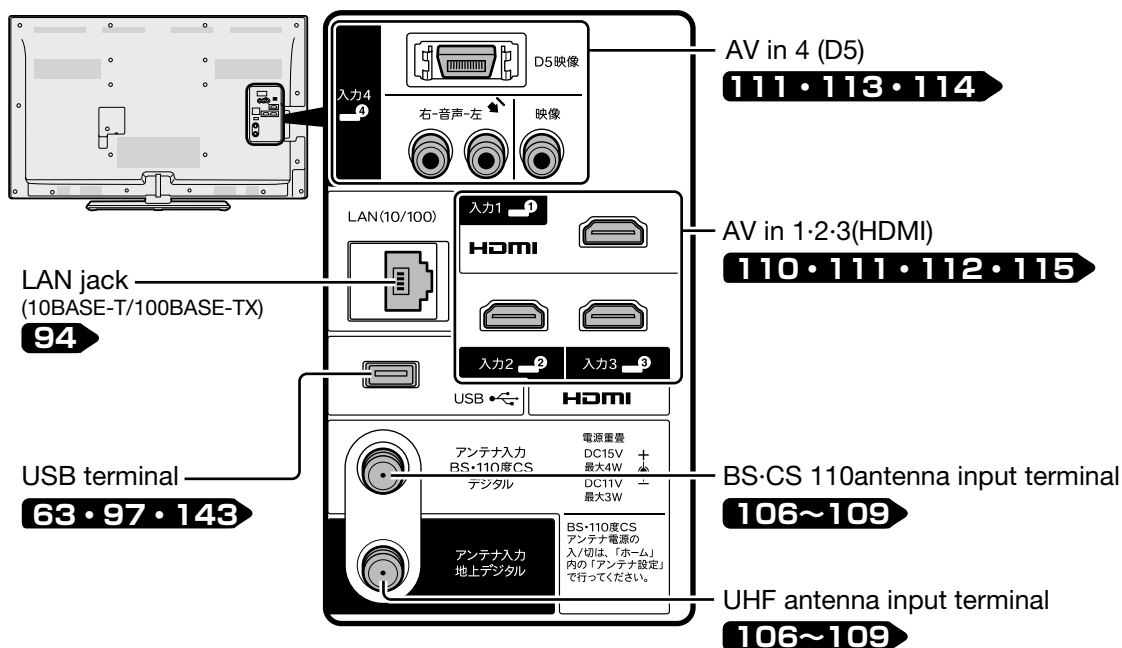

Back view(LC-32H7)

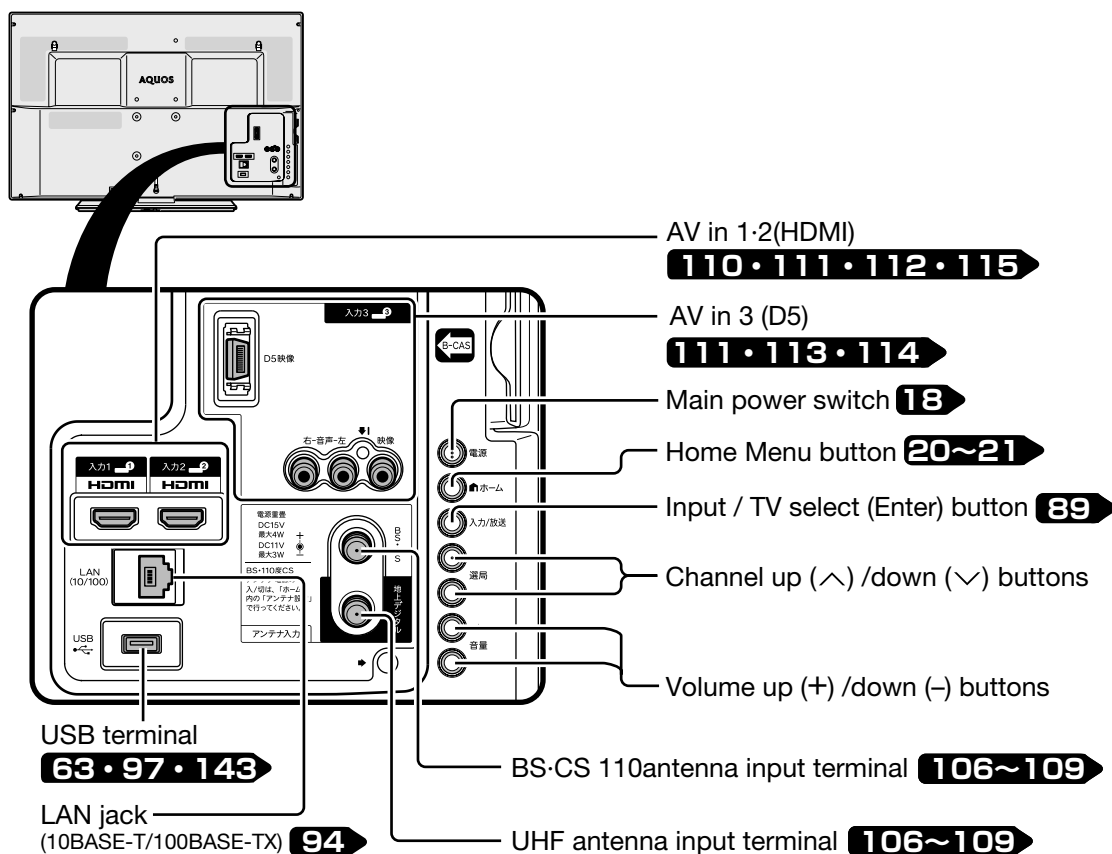

Remote Control Unit

See Page 22 for how to select a program.

Display 40

Active/Standby 18

- Press to engage the TV set in the active or standby mode.

Clock 37

- Press to display a large clock on the screen while watching.

Channel select 22

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial digital/BS/CS 22

- Select the CS digital channel for the first time. 23

Mute 22

- Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) 22

- Press to adjust the volume.

Linked data broadcast 24

- Press to select the picture/sound setting that best matches the current program.

EPG 27

- Press to display or turn off the Electronic Program Guide (EPG:番組表) when receiving a digital broadcast.
- Select a future program in EPG to set a timer program.

Program info 40

- Press to display detailed information on the current digital program.

Cursor (up, down, left, right) / Enter/Confirm 21

Finish

- Press to finish menu operation, etc.
- * This button can be conveniently used when you are at a loss during menu or EPG operation, etc.



Split screen 34

- Press to switch between the split screen mode and the normal screen mode.



Operable screen 36

- Press to switch the operable screen when the TV set is in the split screen mode.



Screen mode 44

- Press to select the desired screen mode.



Audio select 38

Timer 54

SAVE mode 57

Freeze 36

Digital channel number input 23

- Use to select a digital channel by entering the 3-digit channel number.

Recording list 77 • 88

- Press to display a list of programs recorded onto a USB HDD or AQUOS recorder.

Input select 89 • 93

Channel up (^)/down (v) 22

- Press to select channels in the ascending or descending order.

Familink 66 • 84

- Press to operate "Familink" Recorders connected via HDMI cables.

Sleep timer 50

Display the "Home" Menu 21

Display the Tool Menu 21

Return

Color

23 • 24 • 28 • 60~61 • 74~75 • 76~81 • 86 • 88 • 97~98

- Use to operate EPGs and data program screens.

Recording/Playback operation


- Recording operation**
Press to record onto USB HDD or AQUOS recorder.

68~69 • 81 • 86

- Playback operation**

Press to play a program recorded onto a USB HDD or AQUOS recorder.

77 • 78 • 88



To open the cover

Hold the cover by the projections on both sides and lift upwards.

Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



1
Press
[ホーム]
and
select
with
[決定]

Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2
Select
with
[決定]

Select “観(視聴準備)” (View Setting).

「観(視聴準備)」を選ぶ



3

Select
with
[決定]
Press
[決定]

Select “Language(言語)”.
「Language(言語)」を選ぶ



4

Select
with
[決定]
Press
[決定]

Select “English”.
「English」を選ぶ

Enter.
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press
[ホーム]

Finish this operation.
終了する

◇おしらせ◇
誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「観(視聴準備)」－「言語(Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

はじめに
お読みください

電源を入れる／
基本の使いかた

テレビを見る／
便利な使いかた

USBハードディスク
をつないで録画・見ると

ファミリンクで使う／
レコーダーやパソコンをつなぐ

双方向通信／
USBメモリー

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や索引)

English
Guide

シャープはエコポジティブ。



省エネ 明るさセンサー

- テレビを見るお部屋の明るさに合わせて、画面の明るさを自動調整。無駄に消費する電力を低減します。

省エネ 「無信号電源オフ」機能

- テレビ放送終了後など、番組が映らない状態になると約 15 分後に電源がオフになるよう設定ができます。

MY家電登録のご案内

詳しくはホームページで→



人と家電と暮らしをつなぐ、シャープの会員サイト

SHARP i CLUB

<http://iclub.sharp.co.jp/m/>

SHARP i CLUB は、お客様がご愛用のシャープ製品について、便利な使い方や、製品のサポート・サービス、キャンペーンなど、一人ひとりに合ったサービスをご利用いただける会員様向けサイトです。

ぜひ登録ください。

お問い合わせ先

お問い合わせの前にもう一度「故障かな?と思ったら」(128ページ)
「こんなときは」(140ページ)をご確認ください。

パソコン



メールでのお問い合わせなど

【シャープサポートページ】

シャープ お問い合わせ

検索

<http://www.sharp.co.jp/support/>

お電話



使用方法や修理のご相談など

【お客様相談センター】



0120 - 001 - 251

携帯電話・PHSからもご利用いただけます。

おかけ間違いのないようにご注意ください。

■IP電話などからフリーダイヤルサービスをご利用いただけない場合は…

電 話	FAX
043 - 331 - 1626	043 - 297 - 2696
〒261-8520 千葉県千葉市美浜区中瀬1-9-2	

受付時間 ●月曜～土曜:9:00～20:00 ●日曜・祝日:9:00～17:00 (年末年始を除く)

●所在地・電話番号・受付時間などについては、変更になることがあります。(2012.5)

■ 廃棄時のご注意

家電リサイクル法では、お客様がご使用済みのテレビ(ブラウン管式、液晶式、プラズマ式)を廃棄される場合は、収集・運搬料金、再商品化等料金(リサイクル料金)をお支払いいただき、対象品を販売店や市町村に適正に引き渡すことが求められています。

シャープ株式会社

本 社 〒545-8522 大阪市阿倍野区長池町22番22号
AVシステム事業本部 〒329-2193 栃木県矢板市早川町174番地

Printed in China

TINS-F725WJZZ
12P05-CH-NI

